


DC211 Firmware Update Instruction

1. Please connect power cord and USB cable with DC211. When you use USB cable to connect DC211 and PC, PC will detect DC211 as a "removable disk". (Please DO NOT power on unit.)
2. Please visit Lumens website to download the latest firmware file for DC211. And then save the firmware file to DC211 internal memory.
(<http://www.lumens.com.tw/eng/goto-dc211.asp>)

FW			
Version	Description	Size	Download
DTL103 [2010/02/23]	Bin file	4 MB	


3. Power on DC211, press "Enter + BRT-" on the keypad to call the service menu.

Service Menu : press **Enter+BRT- in sequence (Around 5 seconds)**

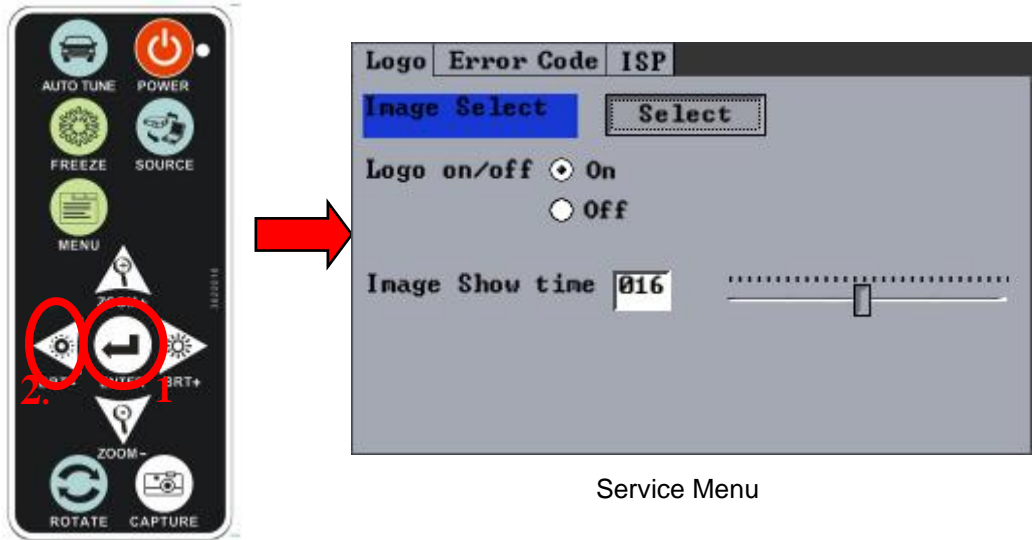

Service Menu

4. Go to "ISP" page, select "Firmware Upgrade", then press Enter.

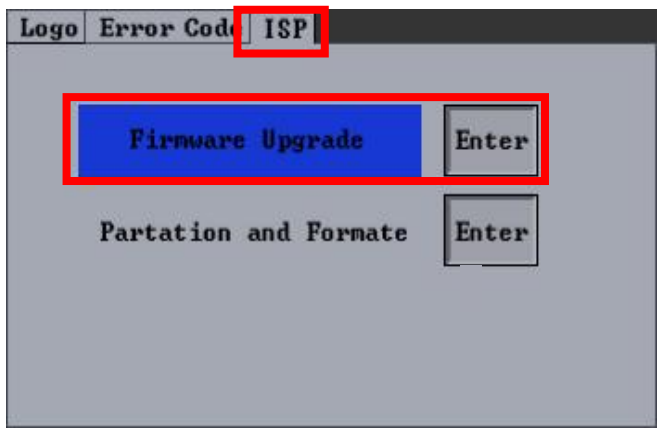


5. Please check the New Version is the latest firmware you desire to upgrade and then press “Yes” to start download.



6. After finish the firmware update, please restart your DC211.



7. Go to OSD-Advance page to check current firmware version.

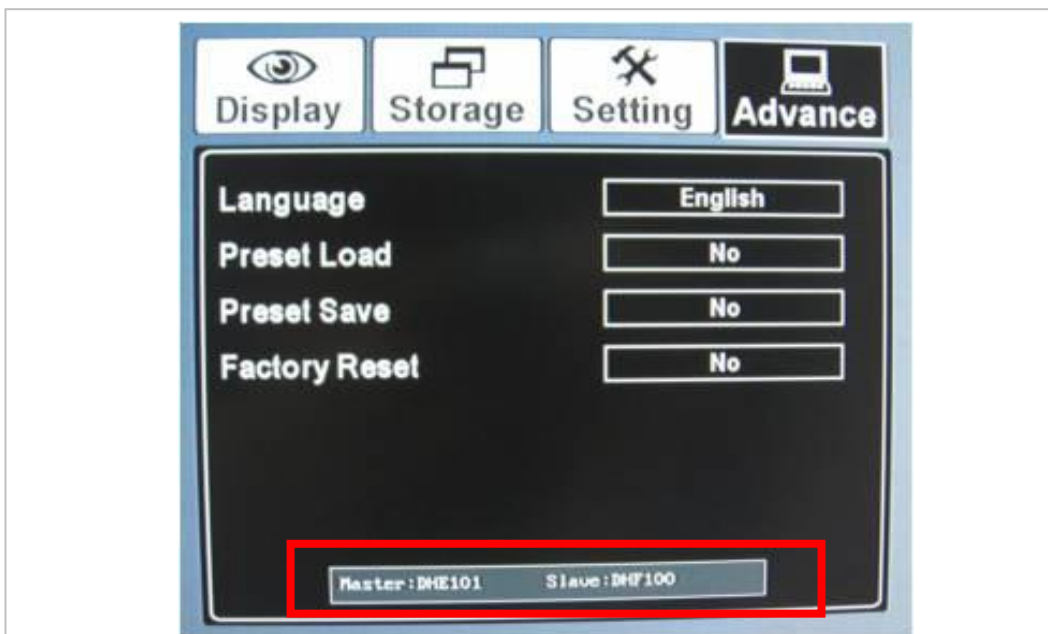

8. Done